

Specifications

		HP01A-TOS	HP02A-TOS
Rated maximum voltage (*2)		4 kV ac (rms), 50/ 60 Hz 5 kV dc	
Cable length		Approx. 1.8 m	Approx. 3.5 m
Environment	Operating temperature and humidity ranges	0 °C to 40 °C (32 °F to 104 °F) 20 % to 80 % RH	
	Storage temperature and humidity ranges	-20 °C to 70 °C (-4 °F to 158 °F) 80 % RH or less	
Accessories		LOW test leadwire: 1 (1.5 m) Operation Manual: 1 copy	LOW test leadwire: 1 (3 m) Operation Manual: 1 copy

NOTE

- The current flowing through the stray capacitance between the high voltage cable of the test probe and the periphery of the cable may contribute to measurement errors. The higher the test voltage or Withstanding Voltage Tester's current detecting sensitivity, the larger the measurement errors. If a test is performed at high current-detecting sensitivity, the current flowing through the stray capacitance may exceed the preset lower limit, depending on the test voltage. This may disable lower-limit judgment.

Description

- *1: The high-voltage area refers to the contact pin and the DUT (an area electrically connected to the contact pin during testing). It also includes areas where high voltage is electrostatically or electromagnetically induced by application of high voltages.
- *2: The rated maximum voltage refers to the maximum voltage the test probe is capable of handling within the given operating temperature and humidity ranges.

KIKUSUI ELECTRONICS CORP.

1-1-3 Higashiyamata, Tsuzuki-ku, Yokohama,
224-0023, Japan

Tel: +81-45-593-7570, Fax: +81-45-593-7571

© 1999



Website <http://www.kikusui.co.jp/en>



OPERATION MANUAL

HIGH VOLTAGE TEST PROBE

HP01A-TOS/HP02A-TOS

Part No. Z1-000-652, IA000786

Jul. 2016

The HP01A-TOS/HP02A-TOS High Voltage Test Probe is a test voltage output probe that connects to a KIKUSUI TOS Series Withstanding Voltage Tester. Its convenient shape allows faster connection to the device under test (DUT).

To prevent potential electric shocks while performing tasks close to a high-voltage area (*1) such as the DUT, always wear rubber gloves for electrical work when performing withstand voltage tests with the test probe.

NOTE

- This product is designed to be used with a KIKUSUI Withstanding Voltage Tester. Carefully read the warnings and precautions given in the TOS Series Withstanding Voltage Tester Operation Manual before attempting to use it.

To Supervisor in Charge of Operations

- **Use of the test probe involves unavoidable electrical shock hazards. Take appropriate measures to ensure maximum safety in the test environment at the DUT, at the test bench, and in nearby areas.**
- **If the operator does not read the language used for this manual, translate the manual into an appropriate language.**
- **Ensure that the operator understands the information in this manual before starting operations.**
- **Keep this manual near the product to allow for easy reference by the operator when necessary.**

Ensuring Safety (How to Avoid Electric Shock)

To prevent electric shock that may result in serious injury or death, never touch the following items:

- **Never touch the contact pin of the test probe.**
- **Never touch the DUT during testing.**

Observe the following instructions to minimize the potential for electric shock that may result in serious injury or death.

- **Never perform testing when leaning on your elbows at the test bench or in other areas.**
- **Do not fasten the slide lever of the test probe such that the contact pin is exposed.**
- **Keep the probe cables neat and free of tangles. Never drape the high voltage cable over any part of your body.**
- **Generate test voltages only when performing actual tests.**

Precautions for Use


⚠ WARNING • The test probe uses a dangerously high voltage capable of causing electric shocks resulting in death unless handled correctly. To prevent accidents, handle the probe with extreme care, abiding by all instructions given below.

■ Ensure the safety of test environments.

- Insulate the DUT and other high-voltage areas (*1) with an electrical insulation rubber plate or sheet to prevent electric shock even if the operator contacts the DUT or other high-voltage areas.
If electrical insulation rubber plates or sheets are not available, contact your Kikusui distributor or agent.
- Implement measures so that only authorized operators can approach high-voltage areas (*1).

■ Never touch the contact pin. Contact will result in electric shock.

- High voltage is delivered to the contact pin. Never touch the contact pin.
- The DUT is also charged to high test voltages during testing. Never touch high-voltage areas (*1).
- Never expose the contact pin except when testing.
- Never touch the red area around the contact pin; this area is also capable of inflicting electric shock.

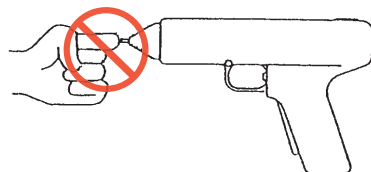

■ Modification may cause electric shock.

- Never fasten the slide lever to the grip such that the contact pin is exposed.
- Do not lock start switch 1 and/or start switch 2 to the on state.
- Do not fasten the high voltage cable to the high voltage terminal of the Tester. If the cable catches against an object, it may be disconnected from the Tester.

■ Do not operate the probe with a single hand.

- For safety reasons, this test probe is designed to be operated using both hands. Never attempt to operate the probe using only one hand.

■ Be sure to connect the remote control cable.

- To prevent electric shock, never perform testing using the Tester START (TEST) switch without the remote control cable.

■ Never use the test probe with withstanding voltage testers from other manufacturers.

- The test probe is designed specifically for use with a KIKUSUI TOS Series Withstanding Voltage Tester. It cannot be used with withstanding voltage testers from other manufacturers, even if the connector appears to be compatible.

■ Never use the product at voltages above 4 kV ac rms or 5 kV dc.

- The rated maximum voltage of the probe is 4 kV ac rms or 5 kV dc. Use at higher voltages may result in electric shock.

■ Handle the test probe attentively. Do not swing it around.

■ Do not yank the test probe cable or drape it over any part of your body.

Inspection Before Starting

Always inspect and confirm the following items before beginning an actual test:

Item	Description of Inspection
Remote control cable	Check for broken sheathing and loose or cracked connectors.
High voltage cable and LOW test lead	Check for broken sheathing and loose or cracked connectors. Use a tester to confirm electrical continuity.
Grip and slide lever	Confirm that the slide lever moves smoothly.
Start switches 1 and 2	Confirm that they operate smoothly when pressed.
Contact pin	Check for any signs of damage.
Warning label	Check for illegibility or peeling.

* If any abnormality or failure is found in the “Inspection Before Starting,” immediately stop using the test probe and contact your Kikusui distributor or agent for repairs.

Stop Use in the Event of Failure

If any of the following conditions arises, the test probe is defective. To minimize hazards, immediately turn off the POWER switch of the Tester and stop using the test probe.

- **The H.V ON LED does not light.**
- **The on/off status of the H.V ON LED of the test probe is inconsistent with that of the DANGER (TEST ON or H.V ON) lamp on the Tester.**
- **The H.V ON LED remains lit even when start switch 1 or 2 is turned off.**
- **The H.V ON LED remains lit even when the contact pin is retracted into the red area.**

⚠ WARNING • Implement measures so that no one can use the test probe until it has been repaired.

- To minimize potential hazards, always contact your Kikusui distributor or agent for repairs.

Component Names and Functions


To prevent electric shock, never touch this area. Do not touch this area when the H.V ON LED is lit.

Red Area

This part holds the contact pin to which high voltage is output.

Contact Pin

High voltage is delivered to this pin. The pin emerges from the red area when you depress the slide lever. The test probe is used with this pin contacting a test point of the DUT.

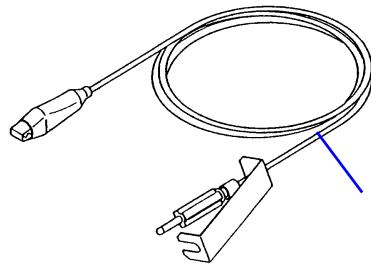

LOW Test Leadwire (black)

H.V ON LED

This red LED indicates that high voltage is being applied to the contact pin. It turns on or off in response to the on/off status of the DANGER (TEST ON or H.V ON) lamp of the Tester.

Start Switch 2

This is used to begin testing. Press the switch with a finger from your non-dominant hand. This hand should be free, since the other hand holds the test probe.

Grip

Grasp this part to use the test probe. Grasp with your dominant hand.

Slide Lever

Depressing this lever causes the contact pin to emerge from the red area. Be sure to depress it with the fingers of the hand grasping the test probe grip.

Start Switch 1 (trigger)

This is used to begin testing. Depress the trigger while grasping the test probe grip with the fingers of your dominant hand.

Remote Control Cable

High Voltage Cable (red)

Releasing your hand from the slide lever will shut off high voltage.


Testing cannot be resumed unless the slide lever is fully depressed and start switches 1 and 2 are triggered or pressed.

Connecting to the Tester

1. Turn off the POWER switch of the Tester.
2. Connect the LOW test leadwire to the LOW (GND) terminal of the Tester and attach the test leadwire fixture as shown in the figure to the right.
3. Connect the remote control cable to the REMOTE terminal of the Tester.
4. Connect the high voltage cable to the high voltage terminal of the Tester.

Connecting the remote control cable starts or stops testing as indicated below:

	Tester's Panel Operation	Operation of Test Probe
Starting test	Disabled	Press start switches 1 and 2.
Stopping test	Press the STOP switch.	Release your finger from start switch 1 or 2.

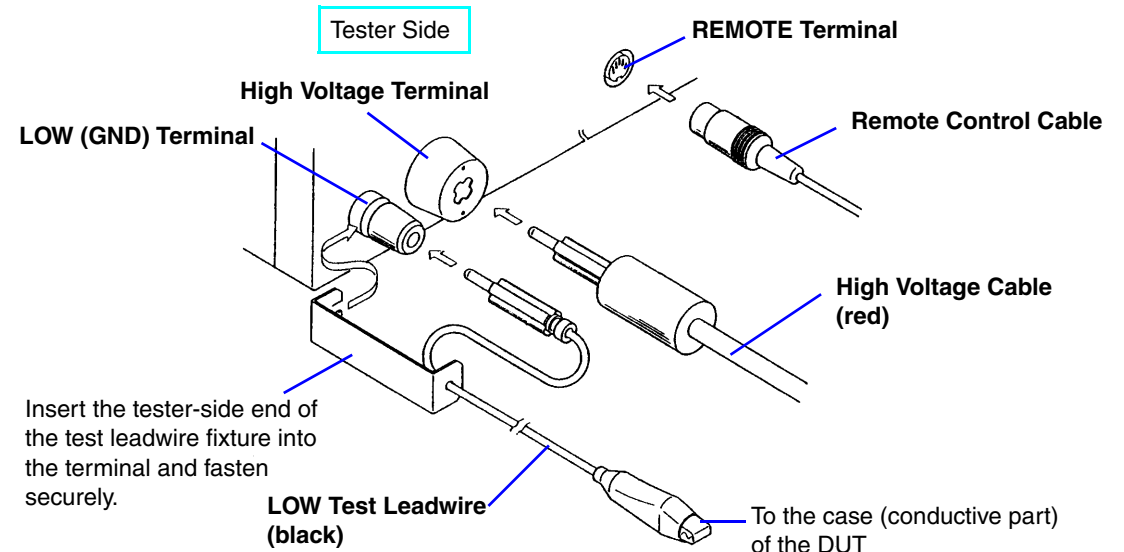

Test Procedure


1. Configure the required test conditions for the Tester by referring to the operation manual.
2. Connect the test probe to the Tester according to the "Connecting to the Tester" item.
3. Connect the alligator clip of the LOW test leadwire to the case (conductive part) of the DUT.
4. Hold the grip of the test probe with your dominant hand.
Do not depress the slider lever yet!
Place your non-dominant hand near start switch 2 and prepare to press the switch.
Do not press start switch 2 yet!
5. Apply the front-end (red area) of the test probe to the test point of the DUT. → a.
6. Depress the slide lever to allow the contact pin to emerge from the front end of the test probe. → b.
Be careful to avoid triggering start switch 1 prematurely.
7. Depress and hold down start switch 1 with a finger of your dominant hand (the hand holding the test probe grip). → c.
8. Press start switch 2 with a finger of your non-dominant hand. → d.
This causes the H.V ON LED to light up; the test voltage is output to the contact pin. → e.
Do not remove the contact pin from the DUT during testing.
9. When testing is complete (or is stopped), lift your finger from start switch 1. → f.
Do not release your fingers from the slide lever or remove the test probe from the DUT.
10. Confirm that the H.V ON LED is not lit. → g.
11. Release your fingers from the slide lever to retract the contact pin into the red area. → h.
12. Release the finger of your non-dominant hand from start switch 2. → i.
13. Remove the test probe from the DUT. → j.
14. Disconnect the alligator clip of the LOW test leadwire from the DUT.

This completes one testing cycle. The test setup returns to the status of step 2. Repeat the procedure for the next DUT, starting with step 3.


After completing all tests, turn off the POWER switch of the Tester.

CAUTION · Initiation of contact or removal from the DUT while high voltages are being output to the contact pin may damage the DUT.

Connecting the test probe to the DUT:

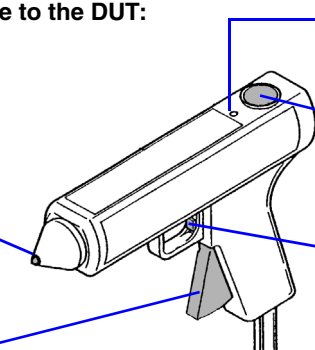- 
- The diagram shows a handheld test probe with a red tip and a contact pin. Labels a through e point to specific parts: a points to the red tip, b points to the slide lever, c points to the trigger switch, d points to the top switch, and e points to the LED indicator.
- a. Apply the front end of the test probe to the DUT.
 - b. Depress the slide lever to allow the contact pin to emerge from the red area.
 - c. Press start switch 1.
 - d. Press start switch 2.
 - e. The H.V ON LED lights.

Removing the test probe from the DUT:

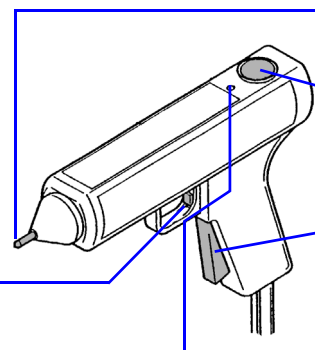- 
- The diagram shows the test probe with the contact pin retracted. Labels f through j point to the same parts as in the previous diagram, showing the sequence of actions to safely remove the probe.
- f. Release your finger from start switch 1.
 - g. The H.V ON LED goes out.
 - h. Release your fingers from the slide lever to retract the contact pin into the red area.
 - i. Release your finger from start switch 2.
 - j. Remove the test probe from the DUT.

Maintenance

Periodic inspections and maintenance are required to maintain the product's original performance over the long term.

- Be sure to disconnect the test probe from the Tester before undertaking inspections or maintenance.
- Avoid volatile solvents such as thinner and benzene, which may discolor the probe's surface coating, erase printed characters, etc.

Cleaning

If the test probe becomes soiled, moisten a piece of soft cloth with a mild, dilute detergent and gently wipe the probe.

Periodic Inspection

The remote control cable, high voltage cable, and LOW test leadwire are consumables. We recommend a inspection by one of our authorized service engineers once a year. To have an inspection performed, contact your Kikusui distributor or agent.